

# Edging and Frame Specs

## Edging Type



### Moss Edging



1/8" Thickness  
100% Moss



### Felt Edging

1/8" Thickness  
60% Recycled PET


## 5/16" Face Width Aluminum Profile Frame

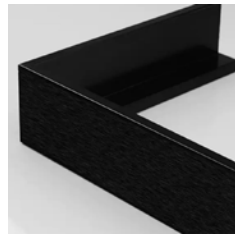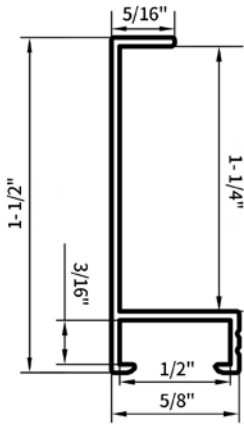

Black



White

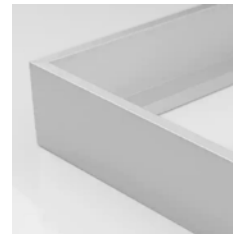

Silver



Titanium Gold



Rose Gold



White Oak Grain




Dark Walnut Grain




Teak Wood Grain

## Installation Guide


### Tool Recommended

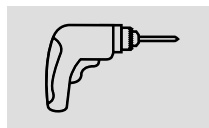

Cordless screwdriver

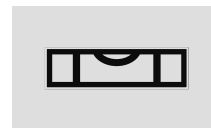

Building level

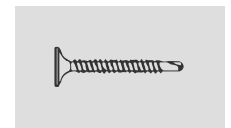

Screws

### Note:

For certain projects, frames will be pre-installed onto the panels before shipment. Please refer to the project-specific installation manual for detailed installation guideline

### 1. LOCATE PRE-DESIGNED GROOVES

For projects using the Frame Add-On, pre-designed grooves are integrated into the back of the edge panels. Refer to the installation layout to identify these panels.

### 2. ASSEMBLE AND ATTACH THE FRAME

Connect the provided frame components, then carefully snap the assembled frame into the grooves on the back of the panels.

### 3. SECURE THE FRAME (IF NEEDED)

For additional stability, use screws to fasten the frame to the moss panels as needed.

